

## Novis Toaster / Instructions for Use

Contents	Page
Safety Instructions	1
Using the Unit	2
Clean and Care	3
Specifications	3
Warranty	3
Disposal	3
Customer Service	3

### Applicable Toaster

This manual is valid for the following Novis appliances:

Device	Model
<b>Novis Toaster</b>	<b>6115 - T2 (2 Slot Short)</b> <b>6116 - T4 (2 Slot Long)</b>

### Safety Instructions

#### Your safety and the safety of others are of the utmost importance.

Several safety recommendations are listed in this instruction manual. Please read and always take this safety advice into consideration.



Under this symbol, we warn you of any possible hazard that could cause death or injuries. All the safety recommendations explain to you the kind of danger and provide advice on how you could prevent the risk of injuries, keeping you informed of the consequences if you do not follow the recommendations.



This symbol indicates useful operation advice.

#### When working with electrical equipment, the following basic safety precautions should be observed at all times:

1. Read these instructions carefully.
2. To protect against the risk of electric shock, never put the Novis Toaster into water or other liquids.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. Children must not play with the Novis Toaster.
5. Cleaning and user maintenance shall not be made by children without supervision.
6. Remove the plug from the socket when you are not using or when you are cleaning the Novis Toaster.
7. If you drop the appliance or if it is damaged in any way, contact the nearest Novis customer service point and have the appliance checked.
8. If the power cord is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid hazards / damages.
9. Do not leave the power cord hanging over the edge of a table or work surface and protect it from heat and oil.
10. If the plug does not fit into the socket, the device must not be used.
11. Novis assumes no liability if the device is used with a power adapter.

12. Do not remove the plug from the socket by pulling the power cord; do not remove the plug from the power socket with wet hands.
13. Never use defective parts.
14. Do not use the appliance outdoors.
15. Do not place the Novis Toaster on hot or wet surfaces and do not operate the appliance near open flames.
16. Do not put your hands into the container while processing food as this can cause injuries or equipment damages.
17. Do not misuse the device for any other purpose than bread toasting, otherwise it may cause injuries or damage to the device.
18. Keep the appliance and its cord out of reach of children.
19. Always disconnect the appliance from the supply if it is left unattended.
20. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.



**Keep these instructions for future reference.**

---



**WARNING:**

- Do not touch heating elements of the toaster during operation – it is dangerous.
- Never attempt to extract jammed toasts from the operating toaster using a knife or any other object, as contact with live elements may result in an electric shock. Unplug the unit; allow the unit to cool down, and carefully remove the bread, using a wooden spatula.

## Using the Unit

---

### First Time

- Before using the unit for the first time, remove all packing materials.
- Before putting the bread insert the plug into the socket, set the browning control (3) to the maximal time and switch on the unit, by pressing the lever (2).
- While first usage, the heating elements of the toaster burn and it may lead to appearance of some smoke – it is normal.

### Important Tips

- Browning degree depends on thickness of a toast, type and quality of bread.
- Never brown too thick or thin slices, toasts thickness should be not more than 20 mm.
- If toasts got stuck, switch off the unit to remove them, by pressing the Cancel button (6), unplug the unit and let the unit cool down. To remove the toasts use a wooden spatula. Do not touch heating elements of the toaster – it is dangerous.

### Making Toasts

- Insert the bread slices into the slots (1).
- Insert the plug into the socket.
- Use the browning control (3) to set the required operating time.
- 1 – minimal browning degree; 7 – maximal browning degree.
- Press the lever (2) till clamp, the button (6) will light up.
- When the toasts are ready the unit will switch off automatically, the lever (2) will return to the initial position and the button (6) will extinguish.

### Bagel

- Insert the sliced bagels into the slots (1). (Only the two inner heating elements will be used).
- Use the browning control (3) to set the required operating time.
- 1 – minimal browning degree; 7 – maximal browning degree.
- Press the lever (2), the button (6) will light up.
- Press the “Bagel” button (7), the button will light up.

### Reheating

- You can heat chilled toasts in this mode without additional browning.
- Insert the toasts; press the lever (2), the button (6) will light up.
- Press the “Reheat” button (5), the button will light up.

### Defrost

- You can brown frozen toasts in this mode.
- Insert the toasts; press the lever (2), the button (6) will light up.
- Press the “Defrost” button (4), the button will light up.

### “Cancel” Button

- Press the (6) “Cancel” button if you want to interrupt the toasting process.

### Extra Lift Function

- The unit is equipped with an Extra Lift Function (2), which allows additional uplift of approx. 20mm.
- For small size toasts and breads, lift the lever up to remove smaller pieces of bread.


### Crumb Tray

- The unit is equipped with a crumb tray (8).
- To open the crumb tray press the tray button (8), take it out and remove crumbs.

### Clean and Care

- Make sure that the unit is unplugged before cleaning.
- Wait till the toaster cools down completely.
- Never immerse the unit into water or other liquids.
- Wipe the outer surface of the toaster with a damp cloth, and then wipe it dry.
- Remove the crumb tray, remove the crumbs and set the tray back in place.
- In order to avoid damages of the unit do not insert foreign objects into bread slots.
- Keep the unit in a dry cool place, out of the reach of children.

## Specifications

Nominal voltage	220-240 Volt
Nominal power	T2 - 900 Watt; T4 - 1600 Watt
Frequency	50-60 Hertz
Maximum dimensions (width x depth x height)	T2 = 18 x 32 x 20 cm T4 = 18 x 44 x 20 cm
Cable length	~0.85m
Material housing	Metal
Test method:	 EN/IEC 60335 (IEC 60335-2-14 and IEC 60335-1)

## Warranty

Warranty period:	Novis covers the cost for:	Novis does not cover the cost for:
2 (two) years full warranty	Parts and labour costs to fix the material damage and manufacturing defects. Repairs must be performed by an authorized Novis customer centre.	Repairs of a Novis Toaster that is used in the household for purposes other than toasting. Repairs of damage caused by accidents, alterations, misuse, abuse, installation and operation not in accordance with the local electrical regulations.
Novis does not provide any warranty to cover incidental or consequential costs.		

## Disposal

---



In accordance with the requirements of the European Directive 2002/96 / EC on Waste Electrical and Electronic Equipment (WEEE), this appliance provides the mark. Please protect the environment and the health of others by disposing the Novis appliances properly. Discard unusable appliances by severing the power plug and cable.

## Customer Service

---

All repairs and services must be handled locally by an authorized Novis customer centre.

Please contact your sales outlet or read more on the Internet: [novissa.com](http://novissa.com)

The manual can also be downloaded on [novissa.com/manual](http://novissa.com/manual)

### Manufacturer and Importer

Novissa Switzerland AG

Schulstrasse 1a

2572 Sutz, Switzerland

T: +41 32 475 1015 E-Mail: [info@novissa.com](mailto:info@novissa.com)